



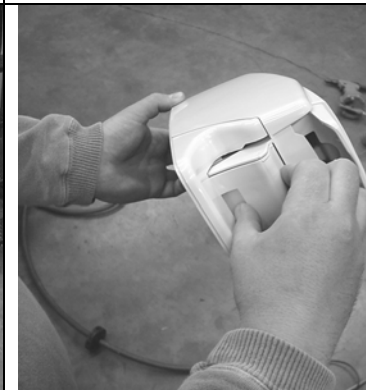
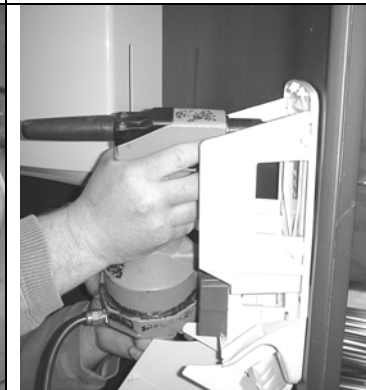

MAXIM 3000 ACCESSORY INSTALLATION INSTRUCTIONS

Note: All references to left and right are looking at the front of the unit.

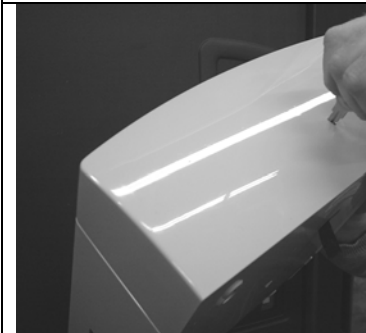
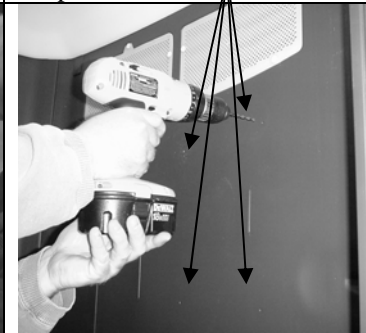


Paperguard Toilet Paper Dispenser

<p>The paper guard can be installed in two locations, the right panel in units without a handwash station.</p>	<p>The left panel in units with a handwash station.</p>	<p>Drill the four dimples shown for the paperguard using a #10 (3/16") drill bit.</p>	<p>Insert an expanding rivet through the upper most hole in the paperguard. Position the paperguard and rivet.</p>
			
<p>Rivet the other top hole in the paperguard using another expanding rivet.</p>	<p>Rivet the two lower hole in the paperguard to the panel using two more expanding rivets.</p>	<p>Insert the spindle into the paperguard. Note the position of the hook.</p>	
			


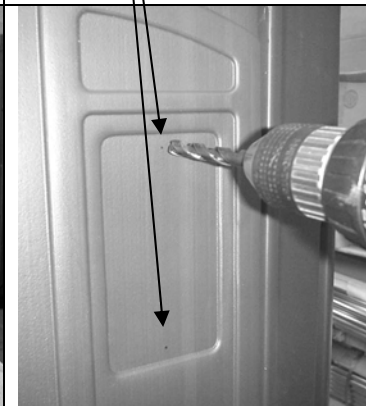


Soap Dispenser

<p>Using the dimples on the front right panel for locations, drill (2) #10 (.194") or 5mm holes being careful to only drill through the inside wall of the panel.</p>	<p>Open the dispenser by pressing on the button as shown.</p>	<p>Rivet the dispenser to the panel using two expanding rivets. Put the rivet through the top of the key-hole slot.</p>	<p>Install soap pack and close.</p>
			

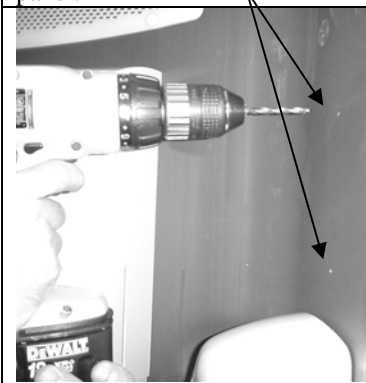


Paper Towel Dispenser

<p>Open dispenser by inserting key (taped to back) into small slot in top of dispenser.</p>	<p>Drill (4) # 10 (.194") or 5 mm holes using the dimples for location being careful to only drill through the inside wall of the panel.</p>	<p>Rivet back plate to side panel with the (4) rivets supplied. Rivet the bottom two locations first.</p>	<p>Rivet the top two locations and install towels and close.</p>
			

Gender Indicator

<p>Using plate as a template, mark holes position on door.</p>	<p>Drill (2) 3/8" (0.375") or 10 mm holes at marks being careful to only drill through outside wall of door.</p>	<p>Using Jacknut wrench and bolt provided, thread bolt through wrench (in the direction indicated on the tool) and into jacknut. Push jacknut into holes in door. Tighten the bolt until there is marked resistance in turning the bolt. (Caution: Wrench is thin metal- protect hand while using). Back out bolt. Repeat above to install second jacknut.</p>	<p>Attach Gender Indicator plate using (2) # 10-24 screws supplied.</p>
			

Mirror Kit

<p>Drill (2) # 10 (.194") or 5 mm holes using dimples for locations being careful to only drill through inside wall of panel.</p>	<p>Remove protective plastic film from mirror surface.</p>	<p>Rivet mirror to door frame using rivets supplied.</p>
		

Shelf Kit

<p>Measure down 16" from the roof and mark the locations with a piece of tape or other non-permanent marker.</p>	<p>Position the top of the shelf even with the marks and drill a # 10 (.194") or 5 mm holes through the hole in the shelf being careful to only drill through inside wall of panels.</p>	<p>Rivet shelf to panels with an expanding rivet as shown.</p>	<p>Drill another # 10 (.194") or 5 mm holes through the hole in the shelf being careful to only drill through inside wall of panels</p>
			
<p>Rivet shelf to panels with an expanding rivet as shown.</p>	<p>Drill another # 10 (.194") or 5 mm holes through the hole in the shelf being careful to only drill through inside wall of panels</p>	<p>Rivet shelf to panels with an expanding rivet as shown.</p>	<p>Drill another # 10 (.194") or 5 mm holes through the hole in the shelf being careful to only drill through inside wall of panels</p>
			



Satellite Industries Europe: 67 avenue de la Toison d'Or - 1060 Bruxelles - Belgium
tel : 0032 / 2-542 56 56 fax : 0032 / 2-542 56 57
moreinfo@satellite.be - www.satellite.be