


INSTALLATION

INSTRUCTIONS FOR MAXIM 3000 HANDWASH

INTRODUCTION

Follow these directions! Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

****CAUTION:** The Maxim 3000 Handwash as well as any portable handwash unit should be cleaned and sanitized on a regular basis. DO NOT DRINK THE WATER.

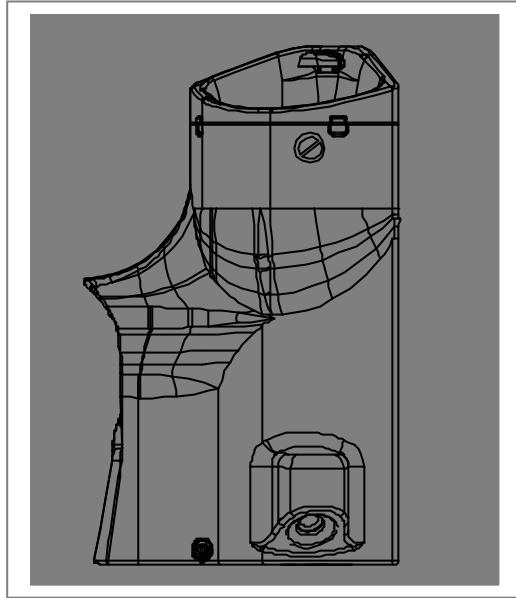


TOOLS


- Drill
- 1-1/8" Hole Saw
- Screw Driver (Phillips #2)
- 3/8" Drill Bit

MAXIM 3000 HANDWASH INSTRUCTIONS

1. Drill (2) .375 holes at dimple locations through the right panel from the inside.

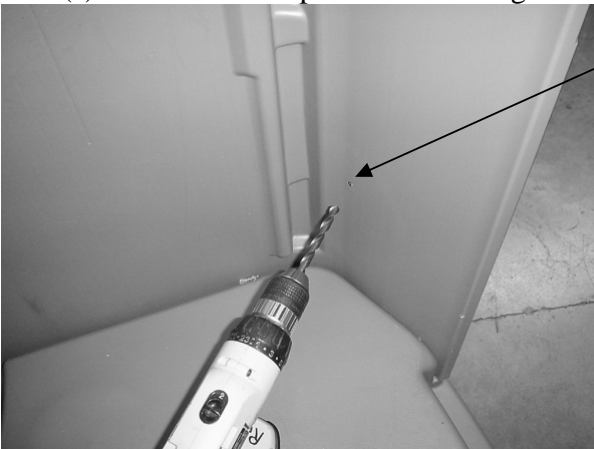

Bottom hole

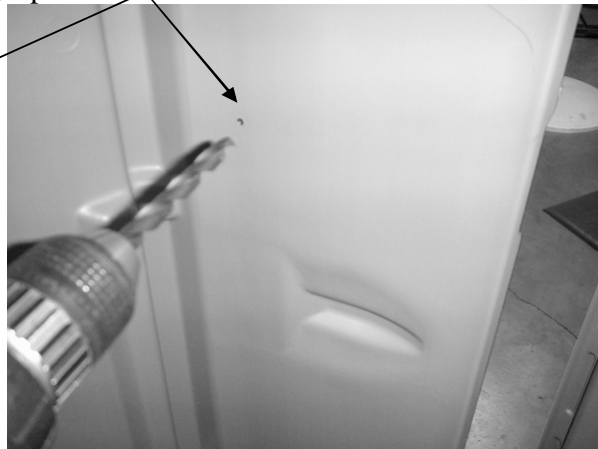

Top hole

MAXIM 3000 HANDWASH INSTRUCTIONS CONTINUED

2. Drill (1) 1.125" hole in tank with the hole saw at dimple for handwash drain hose.



3. Place drain hose into waste tank hole (1.125) and slide handwash tank into place. Inserting flattened edge of handwash between waste tank and right panel.
4. Fasten handwash to panel (see fig # 3) by installing a screw with a Star washer and Flat washer, through hole in panel and into threaded insert in handwash tank (2places).

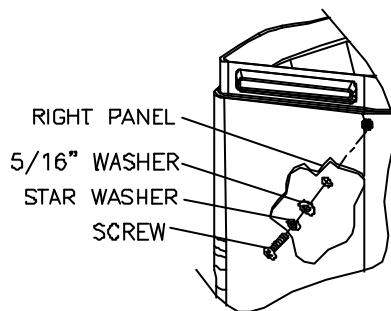


FIGURE #3



Satellite Industries Europe: 67 avenue de la Toison d'Or - 1060 Bruxelles - Belgium
tel : 0032 / 2-542 56 56 fax : 0032 / 2-542 56 57
moreinfo@satellite.be - www.satellite.be