


INSTALLATION INSTRUCTIONS FOR SLIMMATE II

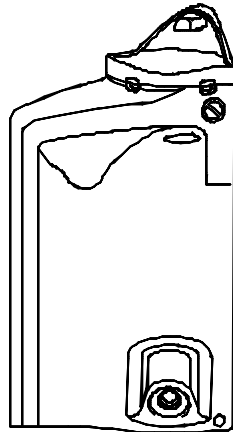

INTRODUCTION

Follow these directions! Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

****CAUTION:** The Slimmate II Handwash as well as any portable handwash unit should be cleaned and sanitized on a regular basis. **DO NOT DRINK THE WATER.**

TOOLS

- Adjustable Wrench
- Drill
- ¼" Drill Bit
- Pencil
- 1" Hole Saw or 1-1/8" drill Bit



Satellite Industries Europe: 67 avenue de la Toison d'Or - 1060 Bruxelles - Belgium
tel : 0032 / 2-542 56 56 fax : 0032 / 2-542 56 57
moreinfo@satellite.be - www.satellite.be

SLIMMATE II INSTRUCTIONS

1. Bracket mounting: Rivet metal bracket to back of pump plate using 2 aluminum rivets and backup washers (See figure #1).
2. Set the Slimmate II in the proper location in the corner with metal bracket going down between the panel and the base. Remove the cover and transfer mark the panel through the top predrilled hole in the Slimmate II. (See figure #2.) NOTE: (It is very important that all hoses are in their appropriate relief channels.)
3. Remove the Slimmate II and drill a 1/4" hole through the panel at the marked location.
4. Drain hose location:
 - If Maxim 2000 or Tufway toilets: Drill 1-1/8" hole through the front right corner of the tank. (See figure #3.)
 - If Maxim 2000 EW: Attach the king nipple to the waste tank in the threaded fitting on the floor and attach the drain hose to the king nipple using a #12 hose clamp turned towards foot pump.
 - Metal bracket will slide between waste tank and the side panel.
5. Place and tighten the elevator bolt, flat washer and nut to the panel through the 1/4" hole. (See figure #4.) Place the Slimmate II back in to the proper mounting location and fasten Slimmate II to panel. NOTE: (It is very important that all hoses are in their appropriate relief channels.)
 - Use the star washer and 1/4-20 wing nut on the elevator bolt. (See figure #4.)
6. Place drain hose into tank. (Drain hose already attached on Maxim 2000 EW.)
7. Place the cover back onto the Slimmate II

