
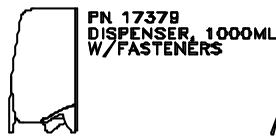


INSTRUCTIONS FOAM SOAP/SANITIZER AND BAG IN BOX DISPENSER INSTALLATION

INTRODUCTION: Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

HARDWARE

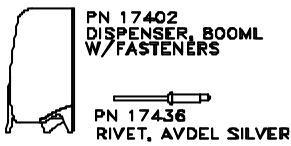

TOOLS




- Cordless/Electric Drill
- #10 (0.194") Drill Bit,
- Rivet Gun

Open dispenser by inserting key in side of disp on foam disp or push up on bottom button of bag in box dispenser.

Note: Be careful to only drill through the inside wall of the panel.


MAXIM3000

TUFWAY

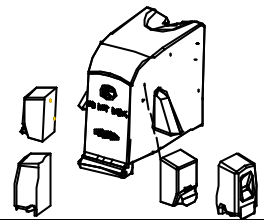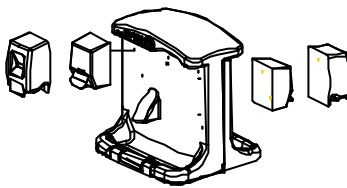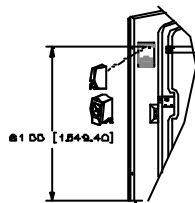

1. Locate dimples for dispenser mounting on right side panel. If using the Bag in Box Dispenser drill out the (2) dimples using a #10 (0.194") [5mm] drill bit, rivet dispenser to panel using (2) Avdel Silver Rivets.
2. If using the Foam Dispenser drill out top dimple with a #10 (0.194") [5mm] drill bit, rivet dispenser to panel using (1) Avdel Silver rivet. Then using the back plate of the dispenser as a template drill out the bottom right hole and rivet together.

1. Place the Foam soap/sanitizer or bag in box dispenser on the right facing (hasp side) in the center at 61.00" from the top of the floor to the top hole in the disp. Mark locations for the 3 rivets in the back plate of the foam dispenser or (2) for the bag in box disp.
2. Drill three #10 (0.194") [5mm] holes at the locations just marked for the Foam disp. or two for the bag in box disp.
3. Inserting the rivets from the inside of the dispenser. Rivet the disp to the right facing, using the Avdel Silver rivets.


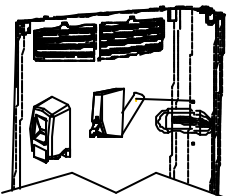


BREEZE

1. Locate and drill (3) holes for the Foam disp or (2) for the bag in box disp. with #10 (0.194)[5mm] bit into the dimples on the left side of the Breeze grey tank and basin.
2. Rivet back plate of Foam disp with the (3) #17436 Avdel Silver Rivets or (2) for the bag in box disp to the tank and basin.

WAVE

1. Locate and drill (3) holes for the Foam disp or (2) for the bag in box disp with a #10 (0.194)[5mm] into the dimples on the side of the wave cover toward the front.
2. Insert #17436 Avdel Silver Rivets through the back plate of the dispenser. Rivet the dispenser to the Wave cover.

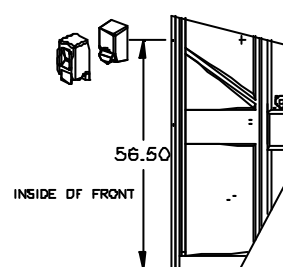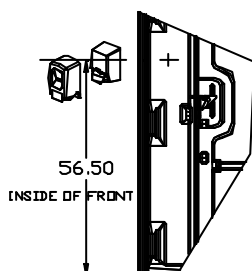

LIBERTY

1. Drill one hole inside of front, 56.50" up from floor, centered on right facing (hasp side), drill thru inside wall only with #10 (0.194)[5mm] Drill Bit. Rivet thru top hole in disp. Complete by drilling thru bottom holes (inside wall only) and rivet plate of Foam disp with the (3) #17436 Avdel Silver Rivets or (2) for the bag in box disp to Front.

FREEDOM2

1. Locate and drill (3) holes for the Foam disp or (2) for the bag in box disp with a #10 (0.194)[5mm].
2. Drill first hole inside of Right Front (hasp side), 56.50" from the floor to the top hole of dispenser and over 3.25" from Right edge of Facing (near aluminum door jamb).
3. Install with #68 AAL pop Rivets #11054 from your Freedom2 hardware kit overage. Insert rivet from the outside the unit and #11315 Washer 3/16" on the inside of the dispenser thru top hole in disp. Complete by drilling thru bottom holes of Foam Disp. with (3) rivets and washers or (2) for bag in box and rivet plate to Front.



Satellite Industries Europe: 67 avenue de la Toison d'Or - 1060 Bruxelles - Belgium
tel : 0032 / 2-542 56 56 fax : 0032 / 2-542 56 57
moreinfo@satellite.be - www.satellite.be